

**GULFSIP GSM GATEWAY**

**VoIP GSM Terminal**

**User Manual**

# 【Content】

|  |    |
|--|----|
| 1.Introduction .....   | 1  |
| 2.Function description .....   | 1  |
| 3.Parts list.....  | 1  |
| 4.Dimension : 30x28x4 cm .....   | 2  |
| 5.Chart of the device .....  | 3  |
| 6.Web Page Setting.....  | 4  |
| 7.System Information.....  | 5  |
| 8. Route.....  | 5  |
| 8.1 Mobile TO LAN Settings.....  | 6  |
| 8.2 Call Back Service (50 sets) **New feature** .....                  | 8  |
| 8.3 Mobile to LAN Speed Dial Settings .....                            | 9  |
| 8.4 LAN to Mobile Settings.....  | 10 |
| 9.Mobile .....   | 12 |
| 9.1 Mobile Status .....  | 12 |
| 9.2 Mobile Setting .....   | 13 |
| 9.3 Mobile / Forward Setting : .....                                   | 15 |
| 9.4 Mobile / Forward Setting : .....                                   | 18 |
| 9.5 use AT Command via Telnet or your program .....                    | 20 |
| 10.Network .....   | 21 |
| 11.SIP Setting.....  | 27 |
| 12. NAT Transform .....  | 36 |
| 13.System Authority .....  | 37 |
| 14.Update .....  | 38 |
| 15.Save Change.....  | 42 |
| 16.Reboot.....   | 43 |
| 17. IP Setting.....  | 44 |
| 18.Specification .....   | 46 |
| 19. Appendix: Setup GS-495/GS-895 with Asterisk .....                  | 47 |
| 20.How to setup Asterisk to receive Caller ID from GS-495/GS-895 ..... | 54 |
| 21. Simple Steps .....   | 63 |

---

---

## **1.Introduction**

1/4 / 8 channels VoIP GSM Terminal is a telecommunication device for call termination (VoIP to GSM ) and call origination (GSM to VoIP). It is SIP based and compatible with Asterisk. It can enable to make 4 / 8 calls simultaneously from IP phones to GSM networks and GSM network to IP phone.(GSM :include CDMA)

## **2.Function description**

2.1 VoIP(SIP)、GSM conversion.

2.2 50 sets of LAN->MOBILE routes setting , 50 sets of MOBILE->LAN routes setting.

2.3 Voice response for setting and status (dial in from mobile).

2.4 Series connections to save bills.

2.5 Standard SIP(RFC2543,RFC3261) protocol , communicates with other gateway or PC.

## **3.Parts list**

Please check the parts for any missing parts. If do, please contact our agents :

3.1 main body

3.2 Power adaptor AC-DC (110V AC – 12V DC) or (220V AC – 12V DC)

3.3 Network cable

3.4 Antenna: 4 port:1 pcs / 8 ports: 2 pcs

3.5 Rack-mount accessories (compatible with 19"Rack)


3.6 User Manual

- 
- 5.1 Antenna : Antenna connector.
  - 5.2 WAN: RJ-45 internet connector , standard RJ-45 socket , connect to HUB.
  - 5.3 DC 12V : Power input.
  - 5.4 SIM Card
  - 5.5 LINK Indicator : Light up when network is connected.
  - 5.6 CH3 : an indicator light of VoIP3
  - 5.7 CH4 : an indicator light of VoIP4
  - 5.8 PWR (Power LED) : Light up when power is normal.
  - 5.9 reboot button: reboot ch1-2 without power off

---

## 6.Web Page Setting

When the IP setting is done, the operator may setup all the rest parameters via web page. Browse the IP address from Internet Explorer (e.g. <http://192.168.0.100>). The following page shows up :

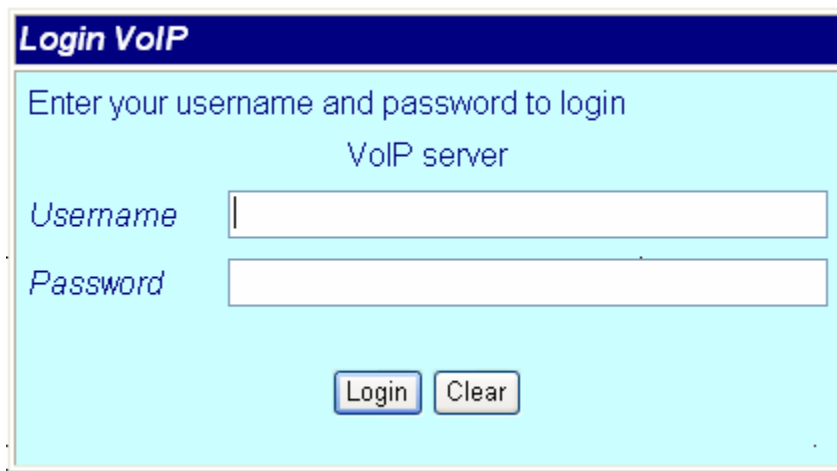

**Login VoIP**

Enter your username and password to login  
VoIP server

Username

Password

Enter the username and password for authentication. (default username=VoIP, password=1234). The page follows when the username and password are correct.

---

## 7. System Information.

7.1 When you login the web page, you can see the current system information like firmware version, company... etc in this page.

7.2 Also you can see the function lists in the left side. You can use mouse to click the function you want to set up.



### Mobile VoIP8 v6.691a

|                  |                    |                           |
|------------------|--------------------|---------------------------|
| Route            | Model Name:        | Mobile VoIP-8             |
| Mobile           | Model Description: | GSM:900/1800/1900MHz      |
| Network          | Firmware Version:  | Thu May 15 14:50:55 2008. |
| SIP Settings     | Codec Version:     | Mon Jul 24 10:55:05 2006. |
| NAT Transform    |                    |                           |
| Update           |                    |                           |
| System Authority |                    |                           |
| Save Change      |                    |                           |
| Reboot           |                    |                           |

## 8. Route

Important:


The route table -50 sets can share by two channels(1,2 ch / 3,4 ch / 5,6 ch / 7,8 ch )

ex: Mobile 1 use the route table for item 0-24,

Mobile 2 use the route table for item 25-49

## 8.1 Mobile TO LAN Settings

The operator may assign 50 sets of routing rule to transfer the call



### Mobile To LAN Table

Route

Mobile

Network

SIP Settings

NAT Transform

Update

System Authority

Save Change

Reboot

Mobile 1, 2

Page: 1

| Item | CID | URL | Select                   |
|------|-----|-----|--------------------------|
| 0    | *   | *   | <input type="checkbox"/> |
| 1    |     |     | <input type="checkbox"/> |
| 2    |     |     | <input type="checkbox"/> |
| 3    |     |     | <input type="checkbox"/> |
| 4    |     |     | <input type="checkbox"/> |
| 5    |     |     | <input type="checkbox"/> |
| 6    |     |     | <input type="checkbox"/> |
| 7    |     |     | <input type="checkbox"/> |
| 8    |     |     | <input type="checkbox"/> |
| 9    |     |     | <input type="checkbox"/> |

Delete Selected

Delete All

reset

Add New

Position:  (0~49)

CID:  Ex:0911111111, 0911\*, \*

URL:  Ex:192.168.0.1, \*:2St

Add

Reset

The GS-495/GS-895 will transfer to the URL according to the caller ID of the Mobile.

\*CID (Caller ID of GSM) :

- (1) may enter the whole number, e.g. 0911111111
- (2) only part of the number (prefix) e.g. 0911\* means any number starting with 0911 will be accepted
- (3) \* means all numbers can be accepted

---

(4) N means the calls without the CID

Please note the priority of the rules. The item which has more digits will have higher priority. If the digits are the same, then former one gets the higher priority.

\*URL : The IP address to transfer this call

(1) may enter the whole IP address, e.g. 192.168.0.101 or proxy extension or phone number.

(2) If this field is blank or simply 'N', it means refuse to transfer.

(3) If an '\*' entered, it means 2-stages-dialing. The call will be answered and prompt dial tone to receive the IP address/sip extension or **any phone number** as the destination. The caller may enter the IP such as 192\*168\*0\*101#.

\*If the device has registered proxy server/Asterisk ,you can enter any destination phone number. Please note the proxy server/Asterisk need to set the route of destination phone number.

Example:

(1) Mobile to Lan: 0932\*,0911123456

GS-495/GS-895 have registered proxy server/Asterisk

The proxy server/Asterisk have the route "09"

When the caller's prefix number is 0932,GS-495/GS-895 will connect 0911123456 automatically

(2) Mobile to Lan: \*,\*


Any caller call the GS-495/GS-895's sim, GS-495/GS-895 will prompt dial tone. Caller can enter IP or sip extension or phone number.

\*sip extension or phone number both need to register SIP Proxy Server or Asterisk.

\*Phone number, SIP Proxy Server or Asterisk need to set the route of this phone number.



## 8.2 Call Back Service (50 sets) \*\*New feature\*\*



### Mobile To LAN Table

Page: 1

| Item | CID           | URL | Select                   |
|------|---------------|-----|--------------------------|
| 0    | 0933579613    | #   | <input type="checkbox"/> |
| 1    | +886933579613 | #   | <input type="checkbox"/> |
| 2    |               |     | <input type="checkbox"/> |
| 3    |               |     | <input type="checkbox"/> |
| 4    |               |     | <input type="checkbox"/> |
| 5    |               |     | <input type="checkbox"/> |
| 6    |               |     | <input type="checkbox"/> |
| 7    |               |     | <input type="checkbox"/> |
| 8    |               |     | <input type="checkbox"/> |
| 9    |               |     | <input type="checkbox"/> |

**Add New**

Position:  (0~49)

CID:  Ex:09111111111, 0911\*, \*

URL:  Ex:192.168.0.1, \*2St

You can set call back service as the following steps

- (1) CID : set the phone number here (up to 50 sets)
- (2) URL: # (# is the command of call back)

Application:

- a. Call Mobile VoIP
- b. Mobile VoIP will detect the phone number is in call back list or not
- c. If yes, Mobile VoIP will reject the call, and call it back
- d. You will receive the call from Mobile VoIP, and prompt a dial tone

### 8.3 Mobile to LAN Speed Dial Settings

When you set Mobile to LAN Speed Dial Settings and Mobile to LAN at the same time, GS-495/SC-895 will give priority to Mobile to LAN Speed Dial Settings.



## Mobile To LAN Speed Dial

Mobile 1, 2 ▼

| Item | Name | URL | Select                   |
|------|------|-----|--------------------------|
| 0    |      |     | <input type="checkbox"/> |
| 1    |      |     | <input type="checkbox"/> |
| 2    |      |     | <input type="checkbox"/> |
| 3    |      |     | <input type="checkbox"/> |
| 4    |      |     | <input type="checkbox"/> |
| 5    |      |     | <input type="checkbox"/> |
| 6    |      |     | <input type="checkbox"/> |
| 7    |      |     | <input type="checkbox"/> |
| 8    |      |     | <input type="checkbox"/> |
| 9    |      |     | <input type="checkbox"/> |

Delete SelectedDelete AllReset

#### Add New Phone

Position:  (0~9)

Name:

URL:

AddReset


\*The call will be answered and prompt dial tone again. When the caller may enter the “Num”, system will connect the “URL” as destination.

E.g Num:0 Name:test URL:192.168.0.107

When the caller hear dial tone and enter 0, system will connect 192.168.0.107

## 8.4 LAN to Mobile Settings

The operator may assign 50 sets of routing rule to transfer the call incoming from LAN to MOBILE.



### LAN To Mobile Table

Mobile 1, 2

Page: 1

| Item | URL | Call Num | Select                   |
|------|-----|----------|--------------------------|
| 0    | *   | *        | <input type="checkbox"/> |
| 1    |     |          | <input type="checkbox"/> |
| 2    |     |          | <input type="checkbox"/> |
| 3    |     |          | <input type="checkbox"/> |
| 4    |     |          | <input type="checkbox"/> |
| 5    |     |          | <input type="checkbox"/> |
| 6    |     |          | <input type="checkbox"/> |
| 7    |     |          | <input type="checkbox"/> |
| 8    |     |          | <input type="checkbox"/> |
| 9    |     |          | <input type="checkbox"/> |

Delete Selected

Delete All

Reset

Add New

Position:  (0~49)

URL:  Ex:192.168.0.1, 192.168.0.\*

Call Num:  Ex:0911, \*.2St, #, #d?, #d?A?:1St

Add

Reset

The GS-495/GS-895 will transfer to the mobile number according to the incoming URL

\*URL : The IP address of the incoming call.

may enter the whole IP address, e.g. 192.168.0.101 or proxy server's extension. If a simple "\*" is entered, means no restriction for the incoming IP address.

---

\*Call Num :

- 1.may enter the whole number, e.g. 0911111111
- 2.a simple “\*” means 2-stages-dialing. The call will be answered and prompt dial tone again to receive the called number as the destination, e.g. 0911111111 or 0911111111#
- 3.#['d'n']['a'ppp] for one-stage dialing  
[...] is option  
'd'n means to delete the beginning n codes,  
'a'ppp means to add 'ppp' in front.  
for example #d2a09 means one-stage dialing,  
delete the first 2 codes from your destination number,  
then add 09 in front as the new destination number.

**Example:**

Lan to Mobile: \*, #

- (1) GS-495/GS-895 and Lan Phone both need to register proxy server or Asterisk.
- (2)Proxy server/asterisk set the route that the prefix of destination number
- (3)When you dial any destination phone number from lan phone, GS-495/GS-895 will connect this call auto.

**Example of Application:**

When you call the ch.1 GS-495/GS-895 gsm number, it will provide dial tone and you enter a destination number.

Then ch.2 GS/495/SC-895 will dial this number and connect.

ch.1 GS-495/GS-895: mobile to lan set route table \*,\*

ch.2 GS-495/GS-895:lan to mobile set route table \*,#


Additionally, two channels GS-495/GS-895 both need to register proxy server or Asterisk.

And proxy server/asterisk set the route that the prefix of destination number dial out from ch.2 GS-495/GS-895.

---

## 9.Mobile

### 9.1 Mobile Status



### Mobile Status

2008-05-15 17:13

Mobile 1 ▼

|                        |                            |
|------------------------|----------------------------|
| Network Registration.: | Chunghwa Telecom LDM       |
| SIM Card ID:           | 144,0,98889602200752095822 |
| Signal Quality.:       | 27                         |
| GSM S/N:               | IMEI: 35815600782656-1     |
| Incoming IP:           |                            |
| Incoming IP Name:      |                            |
| Outgoing IP:           |                            |
| Incoming Mob:          |                            |
| Outgoing Mob:          |                            |

**Route**

**Mobile**

Status

Settings

Fwd Settings

SMS Agent

**Network**

**SIP Settings**

**NAT Transform**

**Update**

System Authority

Save Change

Reboot

- (1)Choose Mobile 1,2,3 or 4 (GS-895: Mobile 1,2,3,4,5,6,7,8)
  - (2)Network Registration : The telecom carrier which the SIM card been registered.
  - (3)SIM Card ID : SIM card ID.
  - (4)Signal Quality : Signal quality.
  - (5)GSM S/N : IMEI Number
  - (6)Incoming IP : The IP address of the last incoming call from LAN.
  - (7)Incoming IP Name: proxy server name
  - (8)Outgoing IP : The IP address of the last outgoing call to LAN.
  - (9)Incoming Mob : The caller ID of the last incoming call from MOBILE.
  - (10)Outgoing Mob : The called number of the last outgoing call to MOBILE.
-

## 9.2 Mobile Setting



### Mobile Setting

**Route**

**Mobile**

Status

**Settings**

Fwd Settings

SMS Agent

**Network**

**SIP Settings**

**NAT Transform**

**Update**

System Authority

Save Change

Reboot

Mobile 1, 2 ▼


|                        |          |                   |           |
|------------------------|----------|-------------------|-----------|
| (1) VoIP Tx Gain:      | 9 (0~12) | (2) VoIP Rx Gain: | 11 (0~15) |
| (3) LAN Dialtone Gain: | 9 (0~12) |                   |           |

**Mobile 1**    ☒ ON    ☐ OFF

|                        |  |                    |              |
|------------------------|--|--------------------|--------------|
| (4) Routing Range:     | 0 to 24 (0~49)   | (6) CODEC Rx Gain: | 6 (0~7)      |
| (5) CODEC Tx Gain:     | 6 (0~7)  |                    |              |
| (7) SIP From:          | Tel/User (Standard) ▼  | Answer Delay:      | 0 (0~15) (8) |
| (9) CLID Presentation: | <input type="radio"/> Suppression <input checked="" type="radio"/> Invocation                        |                    |              |
| (10) Mobile PIN Code:  | On <input type="checkbox"/> Code: <input type="text"/> Confirmed: <input type="text"/>               |                    |              |
| (11) LAN Answer Mode:  | <input checked="" type="radio"/> Answered <input type="radio"/> Alerted <input type="radio"/> Income |                    |              |

**Mobile 2**    ☐ ON    ☒ OFF

|                    |  |                |          |
|--------------------|--|----------------|----------|
| Routing Range:     | 25 to 49 (0~49)  | CODEC Rx Gain: | 6 (0~7)  |
| CODEC Tx Gain:     | 6 (0~7)  |                |          |
| SIP From:          | Tel/User (Standard) ▼  | Answer Delay:  | 0 (0~15) |
| CLID Presentation: | <input type="radio"/> Suppression <input checked="" type="radio"/> Invocation                        |                |          |
| Mobile PIN Code:   | On <input type="checkbox"/> Code: <input type="text"/> Confirmed: <input type="text"/>               |                |          |
| LAN Answer Mode:   | <input checked="" type="radio"/> Answered <input type="radio"/> Alerted <input type="radio"/> Income |                |          |

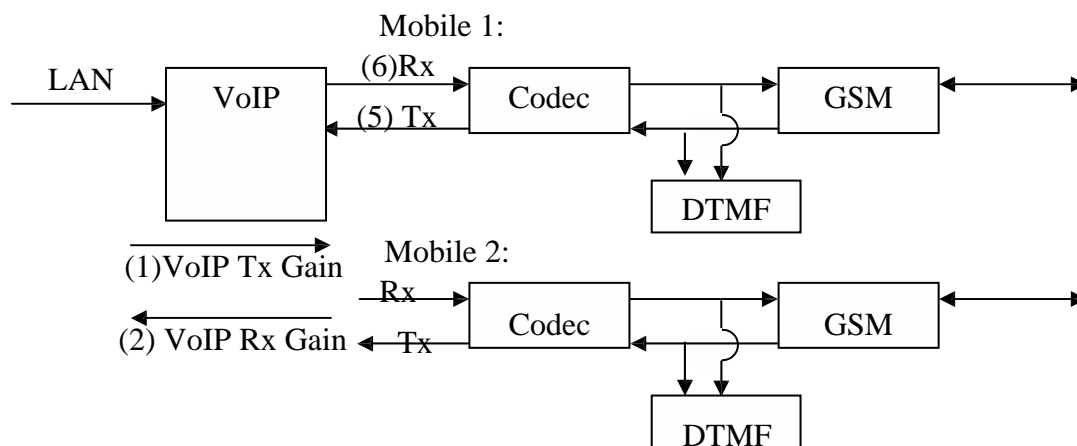

- 
- 
- (1) VoIP Tx Gain: To adjust the volume of LAN side.
- (2) VoIP Rx Gain: To adjust the volume of Mobile side.
- (3) LAN Dialtone Gain: DTMF Receiver is not good, you can adjust gain down.
- (4) Routing Range :The route table -50 sets can share by two channels(1,2 ch / 3,4 ch / 5,6 ch / 7,8 ch )  
ex: Mobile 1 use the route table for item 0-24,  
Mobile 2 use the route table for item 25-49
- (5) CODEC Tx Gain: as above
- (6) CODEC Rx Gain: as above
- (7) SIP From: Caller ID transfer
- z Tel/User(Standard): If you need to register to Asterisk and proxy server, please choose this option. And how to transfer the caller ID to LAN, please refer 21.How to setup Asterisk to receive Caller ID from GS-495/GS-895 (page 42)  
GS-495/GS-895 will send the message as follows in the Packet.  
**From: " caller number " <sip:3001@192.168.0.228>;tag=51088abb**
  - z User/User(Standard): If you need to register to Asterisk and proxy server, please choose this option.  
GS-495/GS-895 will send the message as follows in the Packet.  
**From: " 3001 " <sip:3001@192.168.0.228>;tag=51088abb**
  - z Tel/Tel :  
GS-495/GS-895 will send the message as follows in the Packet.  
**From: "caller number" <sip: caller number @192.168.0.228>;tag=6ac93f7c**
- ※Please note: If you choose this option, please don't register to Asterisk and proxy server. Please only fill **proxy server IP** and choose **Active: on** (else field empty) in sip setting/service
- 
-

---

demand

z User/Tel

GS-495/GS-895 will send the message as follows in the Packet.

**From: " Username " <sip: caller number @192.168.0.228>;tag=7f130947**

※ If you choose this option, please don't register to Asterisk and proxy server. Please only fill  proxy server ip,  Username and choose  Active: on (else field empty) in sip setting/service demand

(8)Answer Delay: Delay for incoming call when the ring.

(9)Presentation CLIR : If you need to block the Caller Id for call termination, please choose Suppression

(10)Mobile PIN Code: If you need to unlock pin code via GS-495/GS-895,you can click "On" and enter pin code.

(11)LAN Answer Mode:

Answered : when mobile answer, then connect the call

Alerted : when the mobile is ringing back tone, then connect the call

Income : when lan dial out, then connect soon

(12) ON/Off: If you use this channel, please click on. Otherwise, please click off.

### 9.3 Mobile / Forward Setting :

When the first route are busying, SIP can transfer phone call to another free route. When the device are busying, the phone call can be transfer to another device (external equipments).






## Forward Setting

Mobile 1, 2 ▼

☐ Forward Enable

|                  | Name                 | URL:Port             |
|------------------|----------------------|----------------------|
| Fwd to Mobile1:  | <input type="text"/> | <input type="text"/> |
| Fwd to Mobile2:  | <input type="text"/> | <input type="text"/> |
| Fwd to External: | <input type="text"/> | <input type="text"/> |

- \* "Forward Enable" is not motivate on Default value.  
So please, mark "Forward Enable" this blank to motivate this function.  
Take SJ Phone for example: Profiles -> Edit -> Advanced -> Accept redirection replies (Turn on the "Forward Enable", therefore the SJ Phone can designate a port which are free to use.)

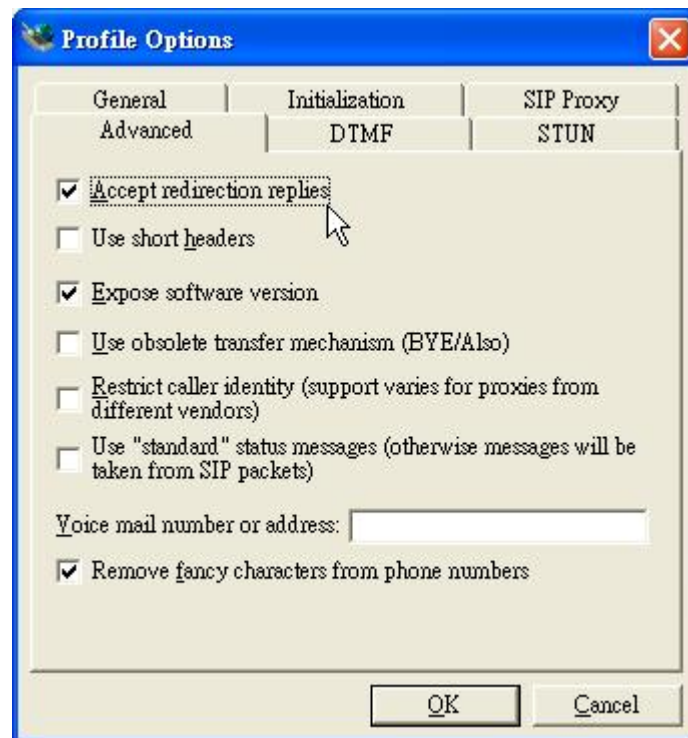

|                  | Name | URL:Port           |
|------------------|------|--------------------|
| Fwd to Mobile1:  |      | 192.168.0.100:5060 |
| Fwd to Mobile2:  |      | 192.168.0.100:5062 |
| Fwd to External: |      |                    |

The Explanation of Picture:

Fwd to Mobile1:192.168.0.100 : 5060, it means when 5062 Port are busying, SJ Phone can transfer the call to 5060 Port (192.168.0.100).

Fwd to Mobile2:192.168.0.100 : 5062, it means when 5060 Port are busying, SJ Phone can transfer the call to 5062 Port (192.168.0.100).

- z If both 5060 port and 5062 port are busying at same time, you can set up "Fwd to External", then you can transfer the phone call to another designate device.

## 9.4 Mobile / Forward Setting :



### SMS Agent

Mobile 1, 2

Read received SMS

| Port     | Status        | Bank               |
|----------|---------------|--------------------|
| Mobile 1 | Standby.      | <div>Rx List</div> |
| Mobile 2 | Not Ready !!! | <div>Rx List</div> |

SMS Sender

Via

Mobile ☒ 1 ☐ 2

Dest Num

Message

Maximum Number of UCS2 chars for this text box is 70.  

You have 70 UCS2 chars remaining for your description...

Send Now

- (1) Rx List: Read received SMS
- (2) Dest Num: the Receiver's phone number
- (3) Message: Please fill the message that want to send to receiver.

When you click Rx List, you can view all received SMS as follows.

## SMS Rx List

Mobile 1

| Read         | Status   | Caller ID    | Date, Time        |
|--------------|----------|--------------|-------------------|
| <div>1</div> | REC READ | 886935386862 | 08/05/15,15:41:46 |
| <div>2</div> |          |              |                   |

---

Click the serial no,you can view message as follows.

## SMS Reader

---

| Index | RemotelD     | Date, Time         |
|-------|--------------|--------------------|
| 1     | 886935386862 | 08/05/15, 15:41:46 |

MV Serial can send SMS and Receive SMS

Back

Delete

---

## 9.5 use AT Command via Telnet or your program

Allows your program or Telnet Send/receive SMS with AT Command available in PCB194A (approximately after April , 2008)

Telnet PORT Corresponding port as follows:

Master ip: 23

SLAVE 1 :8023

SLAVE 1 :8123

SLAVE 1 :8223

```
username: voip
password: ****
user level = 1.
```

Please enter account  
and password

```
command: logout, module, module1, module2.
>module1
getting module 1 ...
got!! press 'ctrl-x' to release module 1.
```

Choose module

```
0
ate1
```

Enter "ate1", then you can see  
your at command below

```
0
at+cmgf=1
```

```
0
at+cmgs="0911123456"
```

Enter at+cmgs="phone number"

```
>
```

```
test
```

Enter short message

```
>
```


```
+CMGS: 30
```

```
0
```

## 10.Network

In Network you can check the Network status, configure the WLAN Settings , LAN Setting and SNTP settings.

10.1 Network Status: You can check the current Network setting in this page.



### Network Status

Route

Mobile

Network

Status

WAN Settings

LAN Settings

SNTP Settings

Slave Setting

SIP Settings

NAT Transform

Update

System Authority

Save Change

Reboot

| Ethernet 0 | WAN Interface   | LAN Interface |
|------------|-----------------|---------------|
| Type       | Fixed IP Client | -             |
| IP         | 192.168.0.110   | -             |
| Mask       | 255.255.255.0   | -             |
| Gateway    | 192.168.0.254   | -             |
| MAC        | 00037E005555    | -             |

| Ethernet 1 | WAN Interface   | LAN Interface |
|------------|-----------------|---------------|
| Type       | Fixed IP Client | -             |
| IP         | 192.168.0.112   | -             |
| Mask       | 255.255.255.0   | -             |
| Gateway    | 192.168.0.254   | -             |
| MAC        | 00037E000077    | -             |

| Ethernet 2 | WAN Interface   | LAN Interface |
|------------|-----------------|---------------|
| Type       | Fixed IP Client | -             |
| IP         | 192.168.0.114   | -             |
| Mask       | 255.255.255.0   | -             |
| Gateway    | 192.168.0.254   | -             |
| MAC        | 00037E000432    | -             |

| Ethernet 3 | WAN Interface   | LAN Interface   |
|------------|-----------------|-----------------|
| Type       | Fixed IP Client | Fixed IP Client |
| IP         | 192.168.0.116   | 192.168.0.108   |
| Mask       | 255.255.255.0   | 255.255.255.0   |
| Gateway    | 192.168.0.254   | 192.168.0.254   |
| MAC        | 00037E000002    | 00037E000003    |

---

10.2 WAN Settings: You can check the current Network setting in this page.

WAN IP (Master) Default: 192.168.0.100

Slaver1 : Master ip:8080

Slaver2 : Master ip:8180

Slaver3: Master ip:8280

WAN IP Corresponding port 5060 5062 5064 5066 5068 5070 5072 5074

If your devices that ship out before 8/6 and you want to update firmware, please contact our FAE. [email:arthur@suncomm.com.tw](mailto:arthur@suncomm.com.tw)

---> **Only allow change Master IP**

---> **Please do not change Slaver IP** Important!!!

**WAN Settings**

You could configure the WAN settings in this page.

Master ▼

| WAN Setting |   |
|-------------|---|
| IP Type     | <input checked="" type="radio"/> Fixed IP <input type="radio"/> DHCP Client <input type="radio"/> PPPoE |
| Master IP   | 192.168.0.110   |
| Mask        | 255.255.255.0   |
| Gateway     | 192.168.0.254   |
| DNS Server1 | 192.168.178.1   |
| DNS Server2 | 168.95.1.1  |
| MAC         | 00037e001f7d  |

| PPPoE Setting |  |
|---------------|--|
| User Name     |  |
| Password      |  |

Submit Reset

## Important!!!

SLAVE1 IP Default IP:192.168.33.102-> Please **do not** change Slaver IP

SLAVE2 IP Default IP:192.168.33.104-> Please **do not** change Slaver IP

SLAVE3 IP Default IP:192.168.33.106->

Please **do not** change Slaver IP



## WAN Settings

You could configure the WAN settings in this page.

Slave 1

| WAN Setting |   |
|-------------|---|
| IP Type     | <input checked="" type="radio"/> Fixed IP <input type="radio"/> DHCP Client <input type="radio"/> PPPoE |
| Master IP   | 192.168.33.102  |
| Mask        | 255.255.255.0   |
| Gateway     | 192.168.33.254  |
| DNS Server1 | 192.168.178.1   |
| DNS Server2 | 168.95.1.1  |
| MAC         | 00037e001f7f  |


| PPPoE Setting |  |
|---------------|--|
| User Name     |  |
| Password      |  |

Submit Reset

- (1) The TCP/IP Configuration item is to setup the WAN port's network environment. You may refer to your current network environment to configure the system properly.
- (2) The PPPoE Configuration item is to setup the PPPoE Username and Password. If you have the PPPoE account from your Service Provider, please input the Username and the Password correctly.
- (3) The Bridge Item is to setup the system Bridge mode Enable/Disable. If you set the Bridge On, then the two Fast Ethernet ports will be transparent.
- (4) When you finished the setting, please click the Submit button.



10.3 LAN Settings: You can check the current Network setting in this page.



## LAN Settings

Route

Mobile

Network

Status

WAN Settings

LAN Settings

SNTP Settings

Slave Setting

SIP Settings

NAT Transform

Update

System Authority

Save Change

Reboot

Ethernet 0

| LAN Setting |               |
|-------------|---------------|
| IP:         | 192.168.0.101 |
| Mask:       | 255.255.255.0 |
| MAC:        | 00037e006666  |

| DHCP Server  |   |
|--------------|---|
| DHCP Server: | <input type="radio"/> On <input checked="" type="radio"/> Off |
| Start IP:    | 0   |
| End IP:      | 0   |
| Lease Time:  | 0 : 0 (dd:hh)   |

Submit


Reset

- (1) The TCP/IP Configuration item is to setup the WAN port's network environment. You may refer to your current network environment to configure the system properly.
- (2)DHCP Server: You may refer to your current network environment to configure the system properly

---

## 10.4 SNTP Settings:

SNTP Setting function: you can setup the primary and second SNTP Server IP Address, to get the date/time information. Also you can base on your location to set the Time Zone, and how long need to synchronize again. When you finished the setting, please click the Submit button.



### SNTP Settings

You could set the SNTP servers in this page.

---

**SNTP:** ☒ On ☐ Off

Primary Server:

Secondary Server:

Time Zone: GMT   :  (hh:mm)

Sync. Time:  :  :  (dd:hh:mm)

**Route**

**Mobile**

**Network**

Status

WAN Settings

LAN Settings

**SNTP Settings**

Slave Setting

**SIP Settings**

**NAT Transform**

**Update**

System Authority

Save Change

Reboot

## 10.5 Slave Settings: Record Slave IP for Master



### Interlink Setting

|                      |
|----------------------|
| <b>Route</b>         |
| <b>Mobile</b>        |
| <b>Network</b>       |
| Status               |
| WAN Settings         |
| LAN Settings         |
| SNTP Settings        |
| Slave Setting        |
| <b>SIP Settings</b>  |
| <b>NAT Transform</b> |
| <b>Update</b>        |
| System Authority     |
| Save Change          |
| Reboot               |

| IP Address : Port |               |         |         |
|-------------------|---------------|---------|---------|
| Master:           | 192.168.0.110 | : 40000 | (Local) |
| Slave 1:          | 192.168.0.112 | : 40000 |         |
| Slave 2:          | 192.168.0.114 | : 40000 |         |
| Slave 3:          | 192.168.0.116 | : 40000 |         |

---

## 11.SIP Setting

In SIP Setting you can setup the Service Domain, Port Settings, Codec Settings, RTP setting, RPort Setting and Other Settings. If the VoIP service is provided by ISP, you need to setup the related information correctly then you can register to SIP Proxy Server correctly.

11.1 In Service Domain Function you need to input the account and the related information in this page, please refer to your ISP Provider. You can register three SIP accounts . You can dial the VoIP phone to your friends via first enable SIP account and receive the phone from the tree SIP account.



### Service Domain Settings

|                      |   |
|----------------------|---|
| <b>Route</b>         | Mobile 1 ▾  |
| <b>Mobile</b>        |   |
| <b>Network</b>       |   |
| <b>SIP Settings</b>  |   |
| Service Domain       | <b>Realm 1 (Default)</b>  |
| Port Settings        | Active: <input checked="" type="radio"/> ON <input type="radio"/> OFF |
| Codec Settings       | Display Name: 803   |
| Codec ID Setting     | User Name: 803  |
| DTMF Setting         | Register Name: 803  |
| RPort Setting        | Register Password: ●●●  |
| SIP Responses        | Domain Server:  |
| Other Settings       | Proxy Server: 192.168.0.1   |
|                      | Outbound Proxy:   |
| <b>NAT Transform</b> | Status: Registered  |
| <b>Update</b>        |   |
| System Authority     | <b>Realm 2</b>  |
| Save Change          | Active: <input type="radio"/> ON <input checked="" type="radio"/> OFF |
| Reboot               | Display Name:   |
|                      | User Name:  |
|                      | Register Name:  |

First you need to click Active to enable the Service Domain, then you can input the following items.

(1) Choose Mobile 1 , 2, 3 or 4

- 
- 
- (2) Display name: you can input the name you want to display.
  - (3) User name: you need to input the User Name get from your ISP.
  - (4) Register Name: you need to input the Register Name get from your ISP.
  - (5) Register Password: you need to input the Register Password get from ISP.
  - (6) Domain Server: you need to input the Domain Server get from your ISP.
  - (7) Proxy Server: you need to input the Proxy Server get from your ISP.
  - (8) Outbound Proxy: you need to input the Outbound Proxy get from your ISP. If your ISP does not provide the information, then you can skip this item.
  - (9) You can see the Register Status in the Status item.
  - (10) When you finished the setting, please click the Submit button.  
Remember to click "Save Charge"

Example:


#### Register VoipBuster

| Realm 1 (Default)  |   |
|--------------------|---|
| Active:            | <input checked="" type="radio"/> On <input type="radio"/> Off   |
| Display Name:      | <input type="text" value="jenny0922"/>                          |
| User Name:         | <input type="text" value="jenny0922"/> Your Voipbuster username |
| Register Name:     | <input type="text" value="jenny0922"/>                          |
| Register Password: | <input type="password" value="****"/> Your Voipbuster password  |
| Domain Server:     | <input type="text"/>  |
| Proxy Server:      | <input type="text" value="194.221.62.207"/> Proxy Server's IP   |
| Outbound Proxy:    | <input type="text"/>  |
| Status:            | Registered  |

## 11.2 Port Setting

You can setup the SIP and RTP port number in this page. Each ISP provider will have different SIP/RTP port setting, please refer to the ISP to setup the port number correctly. When you finished the setting, please click the Submit button.

WAN IP Corresponding port 5060 5062 5064 5066 5068 5070 5072 5074 **(Don't change. Important!!)**



### Ports Setting

Mobile 1, 2 ▼

| Port of Mobile 1 |                    |
|------------------|--------------------|
| SIP Port:        | 5060 (1024~65535)  |
| RTP Port:        | 60000 (1024~65535) |

| Port of Mobile 2 |                    |
|------------------|--------------------|
| SIP Port:        | 5062 (1024~65535)  |
| RTP Port:        | 60100 (1024~65535) |

Route

Mobile

Network

SIP Settings

Service Domain

Port Settings

Codec Settings

Codec ID Setting

DTMF Setting

RPort Setting

SIP Responses

Other Settings

NAT Transform

Update

System Authority

Save Change

Reboot

(Don't change!!)

(Don't change!!)

### 11.3 Codec Settings:

You can setup the Codec priority, RTP packet length in this page. You need to follow the ISP suggestion to setup these items. When you finished the setting, please click the Submit button.



## Codec Settings

|                       |  |
|-----------------------|--|
| <b>Route</b>          |  |
| <b>Mobile</b>         |  |
| <b>Network</b>        |  |
| <b>SIP Settings</b>   |  |
| Service Domain        |  |
| Port Settings         |  |
| <b>Codec Settings</b> |  |
| Codec ID Setting      |  |
| DTMF Setting          |  |
| RPort Setting         |  |
| SIP Responses         |  |
| Other Settings        |  |
| <b>NAT Transform</b>  |  |
| <b>Update</b>         |  |
| System Authority      |  |
| Save Change           |  |
| Reboot                |  |

| Codec Priority    |             |
|-------------------|-------------|
| Codec Priority 1: | G.711 u-law |
| Codec Priority 2: | G.711 a-law |
| Codec Priority 3: | G.723       |
| Codec Priority 4: | G.729       |
| Codec Priority 5: | G.726 - 16  |
| Codec Priority 6: | G.726 - 24  |
| Codec Priority 7: | G.726 - 32  |
| Codec Priority 8: | G.726 - 40  |

| RTP Packet Length |       |
|-------------------|-------|
| G.711 & G.729:    | 20 ms |
| G.723:            | 30 ms |

| G.723 5.3K  |   |
|-------------|---|
| G.723 5.3K: | <input type="radio"/> On <input checked="" type="radio"/> Off |

| Voice VAD  |   |
|------------|---|
| Voice VAD: | <input type="radio"/> On <input checked="" type="radio"/> Off |

## 11.4 Codec ID Setting

You can setup the Codec ID in this page.



### Codec ID Setting

You could set the value of Codec ID in this page.

|                         |
|-------------------------|
| <b>Route</b>            |
| <b>Mobile</b>           |
| <b>Network</b>          |
| <b>SIP Settings</b>     |
| Service Domain          |
| Port Settings           |
| Codec Settings          |
| <b>Codec ID Setting</b> |
| DTMF Setting            |
| RPort Setting           |
| SIP Responses           |
| Other Settings          |
| <b>NAT Transform</b>    |
| <b>Update</b>           |
| System Authority        |
| Save Change             |
| Reboot                  |

| Codec Type   | ID  | Default Value                           |
|--------------|---|---|
| G726-16 ID:  | <input type="text" value="23"/> (95~255)  | <input checked="" type="checkbox"/> 23  |
| G726-24 ID:  | <input type="text" value="22"/> (95~255)  | <input checked="" type="checkbox"/> 22  |
| G726-32 ID:  | <input type="text" value="2"/> (95~255)   | <input checked="" type="checkbox"/> 2   |
| G726-40 ID:  | <input type="text" value="21"/> (95~255)  | <input checked="" type="checkbox"/> 21  |
| RFC 2833 ID: | <input type="text" value="101"/> (95~255) | <input checked="" type="checkbox"/> 101 |



## 11.5 DTMF Setting

You can setup the DTMF Setting in this page.



### DTMF Setting


|                      |  |
|----------------------|--|
| <b>Route</b>         |  |
| <b>Mobile</b>        |  |
| <b>Network</b>       |  |
| <b>SIP Settings</b>  |  |
| Service Domain       |  |
| Port Settings        |  |
| Codec Settings       |  |
| Codec ID Setting     |  |
| <b>DTMF Setting</b>  |  |
| RPort Setting        |  |
| SIP Responses        |  |
| Other Settings       |  |
| <b>NAT Transform</b> |  |
| <b>Update</b>        |  |
| System Authority     |  |
| Save Change          |  |
| Reboot               |  |

| Mobile DTMF Transfer to Lan   |                                      |
|---|--------------------------------------|
| <input type="radio"/> 2833  |                                      |
| <input checked="" type="radio"/> Inband DTMF  |                                      |
| <input type="radio"/> Send DTMF SIP Info  |                                      |
| Mobile DTMF debounce: <input type="text" value="80"/> (range:40~200, default:80) step:10ms. |                                      |
| <input type="button" value="Submit"/>   | <input type="button" value="Reset"/> |

## 11.6 RPort Function:

You can setup the RPort Enable/Disable in this page. To change this setting, please following your ISP information. When you finished the setting, please click the Submit button.



## RPort Setting

Mobile 1, 2 ▼

---

RPort of Mobile 1:

☒ On ☐ Off

RPort of Mobile 2:

☒ On ☐ Off

Submit

Reset

Route

Mobile

Network

SIP Settings

Service Domain

Port Settings

Codec Settings

Codec ID Setting

DTMF Setting

RPort Setting

SIP Responses

Other Settings

NAT Transform

Update

System Authority

Save Change

Reboot



## 11.7 SIP Responses

### SIP Responses Setting

|                      |  |
|----------------------|--|
| <b>Route</b>         |  |
| <b>Mobile</b>        |  |
| <b>Network</b>       |  |
| <b>SIP Settings</b>  |  |
| Service Domain       |  |
| Port Settings        |  |
| Codec Settings       |  |
| Codec ID Setting     |  |
| DTMF Setting         |  |
| RPort Setting        |  |
| <b>SIP Responses</b> |  |
| Other Settings       |  |
| <b>NAT Transform</b> |  |
| <b>Update</b>        |  |
| System Authority     |  |
| Save Change          |  |
| Reboot               |  |

| Response on port busy.               |                     |
|--------------------------------------|---------------------|
| <input checked="" type="radio"/> 486 | Busy here           |
| <input type="radio"/> 503            | Service unavailable |

| SIP Responses   |   |
|---|---|
| <input checked="" type="radio"/> ON <input type="radio"/> OFF | 180 Ringing ( Auto force to ON, if 183 was OFF. ) |
| <input type="radio"/> ON <input checked="" type="radio"/> OFF | 183 Session Progress                              |

11.7.1 486(busy here), 503(Service unavailable): When Device **is busy**, you can select 486 or 505 to response to SIP.


11.7.2 180 Ring on/off: LAN TO MOBILE two stage dialing can be turn off, therefore there will be no the Ring Back Tone, all the phone call will be transferred to **prompt voice** directly. (For this function, 183 must be turn on)

---

11.7.3 183(Session Progress)-->[It means "on progressing"]]: When you turn 183 on, it means you can hear the **prompt voice while GSM side is busy** We recommend you to turn this on if you use SIP Proxy.

## 11.8 Other Settings

Other Settings: you can setup the Hold by RFC and QoS in this page. To change these settings. please following your ISP information. When you finished the setting, please click the Submit button. The QoS setting is to set the voice packets' priority. If you set the value higher than 0, then the voice packets will get the higher priority to the Internet. But the QoS function still need to cooperate with the others Internet devices.

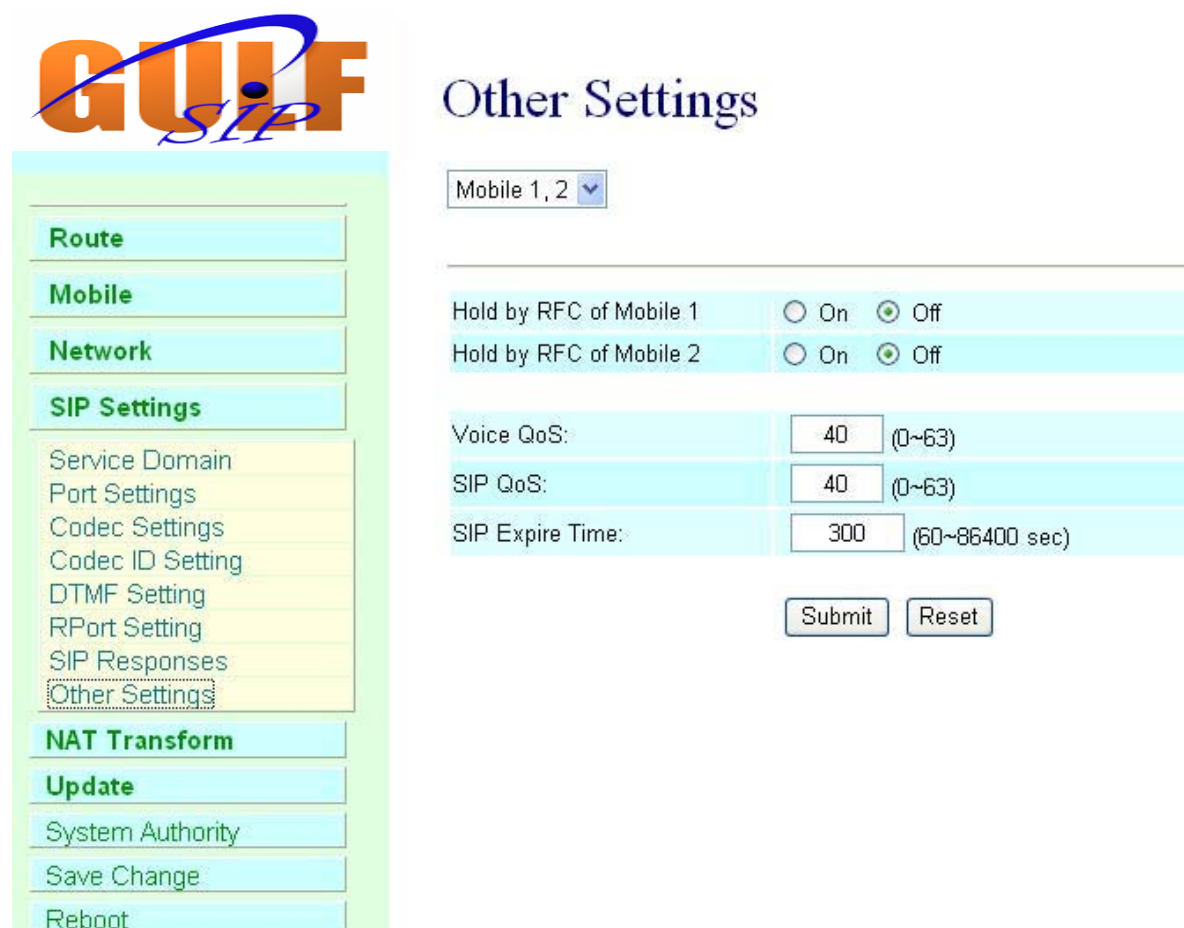

The screenshot shows the 'Other Settings' page for GULF SIP. On the left is a sidebar menu with options: Route, Mobile, Network, SIP Settings (expanded), NAT Transform, Update, System Authority, Save Change, and Reboot. Under 'SIP Settings', there are links for Service Domain, Port Settings, Codec Settings, Codec ID Setting, DTMF Setting, RPort Setting, SIP Responses, and Other Settings (highlighted). The main content area is titled 'Other Settings' and features a dropdown menu for 'Mobile 1, 2'. Below this are two rows of settings for Mobile 1 and Mobile 2, each with radio buttons for 'On' and 'Off' (both 'Off' is selected). Further down are three input fields: 'Voice QoS' (40, range 0~63), 'SIP QoS' (40, range 0~63), and 'SIP Expire Time' (300, range 60~86400 sec). At the bottom right are 'Submit' and 'Reset' buttons.

| Other Settings   |   |
|--|---|
| Mobile 1, 2  |   |
| Hold by RFC of Mobile 1  | <input type="radio"/> On <input checked="" type="radio"/> Off |
| Hold by RFC of Mobile 2  | <input type="radio"/> On <input checked="" type="radio"/> Off |
| Voice QoS:   | <input type="text" value="40"/> (0~63)                        |
| SIP QoS:   | <input type="text" value="40"/> (0~63)                        |
| SIP Expire Time:   | <input type="text" value="300"/> (60~86400 sec)               |
| <input type="button" value="Submit"/> <input type="button" value="Reset"/> |   |

---

## 12. NAT Transform

In NAT Trans. you can setup STUN and uPnP function. These functions can help your VoIP device working properly behind NAT.


12.1 STUN Setting: you can setup the STUN Enable/Disable and STUN Server IP address in this page. This function can help your VoIP device working properly behind NAT. To change these settings please following your ISP information. When you finished the setting, please click the Submit button.

If you want to set up NAT for GS-495/GS-895, you should install STUN Server first. (Or it can only allow one-way call)

The initial setting of STUN Server is ON

You can download STUN Server here(Free): [www.myvoipapp.com](http://www.myvoipapp.com)

If you set GS-495/GS-895 at Public IP, you can use STUN Server's IP directly

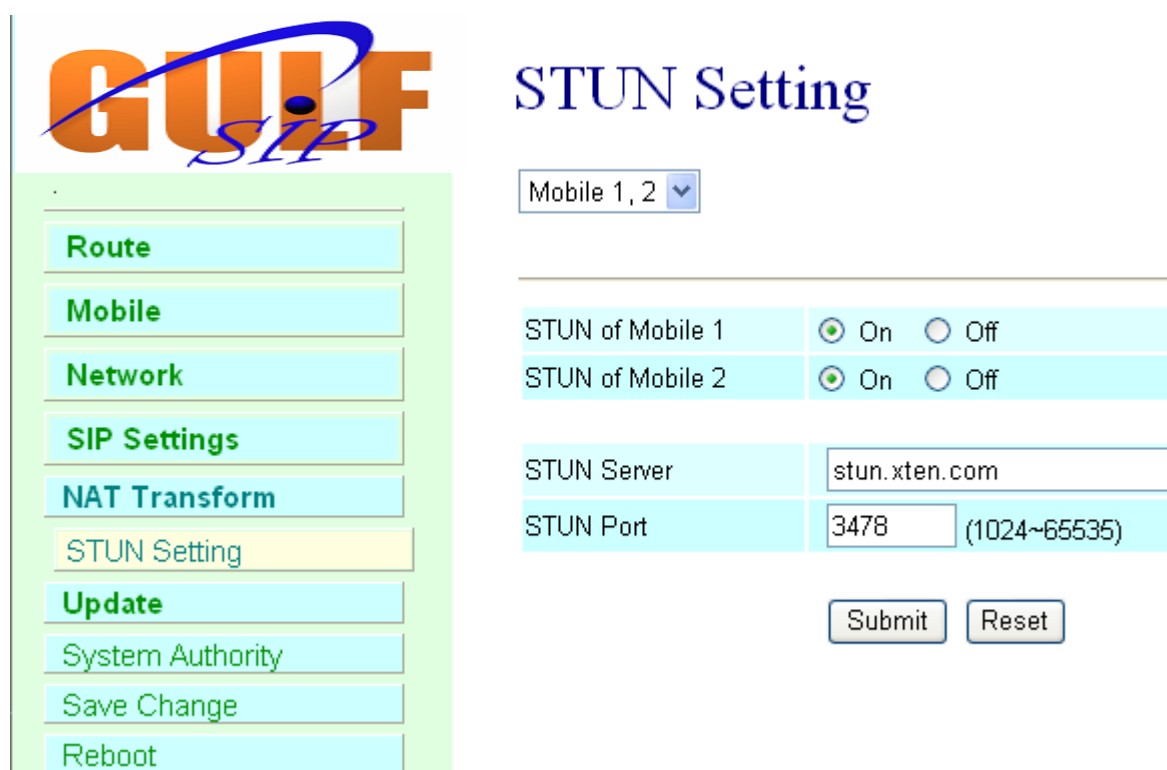


The screenshot shows a web interface for configuring SIP settings. On the left is a sidebar with a menu of options: Route, Mobile, Network, SIP Settings, NAT Transform, STUN Setting (highlighted in yellow), Update, System Authority, Save Change, and Reboot. The main content area is titled "STUN Setting" and includes a dropdown menu for "Mobile 1, 2". Below this, there are two rows for "STUN of Mobile 1" and "STUN of Mobile 2", each with "On" (selected) and "Off" radio buttons. Further down, the "STUN Server" field contains "stun.xten.com" and the "STUN Port" field contains "3478" with a range "(1024~65535)" in parentheses. At the bottom right are "Submit" and "Reset" buttons.

If you set **GS-495/GS-895** at Private IP, you should use STUN Server's private IP

---

---



Route

Mobile

Network

SIP Settings

NAT Transform

STUN Setting

Update

System Authority

Save Change

Reboot

## STUN Setting

Mobile 1, 2 ▼

|                  |   |
|------------------|---|
| STUN of Mobile 1 | <input checked="" type="radio"/> On <input type="radio"/> Off |
| STUN of Mobile 2 | <input checked="" type="radio"/> On <input type="radio"/> Off |
| STUN Server      | <input type="text" value="192.168.0.90"/>                     |
| STUN Port        | <input type="text" value="3478"/> (1024~65535)                |

### 13.System Authority

In System Authority you can change your login name and password.



---

## 14.Update

In Update you can update the system's firmware to the new one or do the factory reset to let the system back to default setting.

### 14.1 Update firmware

**Master IP : 8280 (first update better)**

**Master IP : 8180**

**Master IP : 8080**

**Master IP**

Example

Master ip: 192.168.0.100

Slaver1 Æ 192.168.0.100:8080

Slaver2 Æ 192.168.0.100:8180


Slaver3 Æ 192.168.0.100:8280

Slaver1 Æ 192.168.0.100:8080

Slaver2 æ 192.168.0.100:8180



Slaver3 æ 192.168.0.100:8280

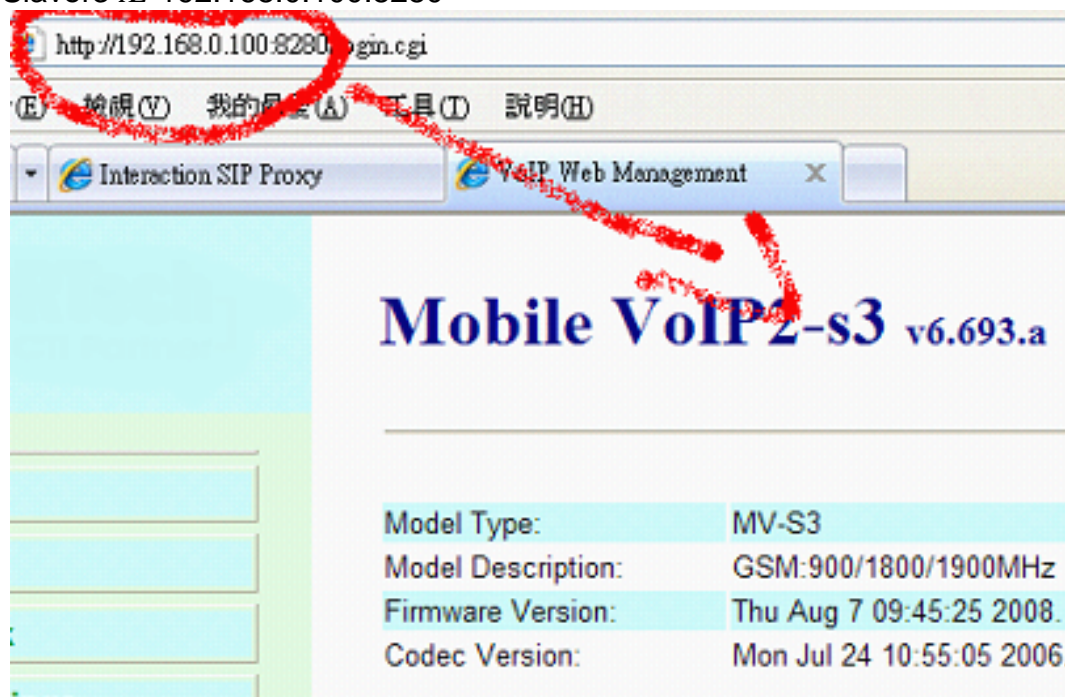





## Update Firmware

You could update the newest firmware. PCB mark: 2N149A

|                  |
|------------------|
| Route            |
| Mobile           |
| Network          |
| SIP Settings     |
| NAT Transform    |
| Update           |
| New Firmware     |
| Default Settings |
| System Authority |
| Save Change      |
| Reboot           |

Method: ☒ HTTP ☐ TFTP

### HTTP

Code Type: Risc

File Location:  瀏覽...

### TFTP

TFTP Server: 192.168.1.250

Update Reset

- (1) In New Firmware function you can update new firmware via HTTP in this page. You can upgrade the firmware by the following steps:
- (2) Select the firmware code type, Risc code.
- (3) Click the "Browse" button in the right side of the File Location or you can type the correct path and the filename in File Location blank.
- (4) Select the correct file you want to download to the system then click the Update button.
- (5) Please click update/default setting after update firmware

---

## 14.2 Restore Default Settings

In this page: Update/ Default Settings, you could restore the factory default settings to the system. **All setting will restore default setting.**  
**IP will retain original IP as usual not default IP.**



### Restore Default Settings

You could click the restore button to restore the factory settings.

Restore default settings:

---

## 15. Save Change

In Save Change you can save the changes you have done. If you want to use new setting in the VoIP system, You have to click the Save button. After you click the Save button, the system will automatically restart and the new setting will effect.




The screenshot shows a web interface for 'GULF SIP'. On the left is a vertical menu with buttons: Route, Mobile, Network, SIP Settings, NAT Transform, Update, System Authority, Save Change (highlighted with a dashed border), and Reboot. The main area is titled 'Save Changes' and contains the text 'You have to save changes to effect them.' followed by a horizontal line. Below this, it says 'Save Changes:' followed by a 'Save' button.

---

## 16.Reboot

Reboot function you can restart the system. If you want to restart the system, you can just click the Reboot button, then the system will automatically restart.



### Reboot System

You could press the reboot button to restart the system.

---

Reboot system:

|                  |
|------------------|
| Route            |
| Mobile           |
| Network          |
| SIP Settings     |
| NAT Transform    |
| Update           |
| System Authority |
| Save Change      |
| Reboot           |

---

## 17. IP Setting

The operator can setup or query the network parameters by dialing in the mobile number which it SIM card has been put in the main body. The status or result is response by voice. In the first 20 seconds after power-on, the VoIP GSM Terminal enters the IP setting mode. The operator may dial in the mobile number during this period to set or query the network parameters.

| Notes   | IVR Menu Choice | IVR Action               | Item |
|---|-----------------|--------------------------|------|
| After you hear "Option Successful," hang-up. Unit will reboot automatically.  | #195#           | Reboot                   | 1    |
| All setting (include IP) both restore to default setting.<br>WARNING : ALL User-Changeable NONDEFAULT SETTINGS WILL BE LOST! This will include network and service provider data. | #198#           | Factory Reset            | 2    |
| IVR will announce the current IP address Default : 192.168.0.100  | #120#           | Check IP Address         | 3    |
| IVR will announce if DHCP is enabled or disabled.<br>default : OFF  | #121#           | Check IP Type            | 4    |
| IVR will announce the current network mask. Default : 255.255.255.0   | #123#           | Check Network Mask       | 5    |
| IVR will announce the current gateway IP address,<br>Default : 192.168.0.254  | #124#           | Check Gateway IP Address | 6    |
| IVR will announce the current   | #125#           | Check Primary            | 7    |

|   |                      |                        |    |
|---|----------------------|------------------------|----|
| setting in the Primary DNS field.<br>Default : 192.168.0.1  |                      | DNS Server             |    |
| IVR will announce the version of the firmware running   | #128#                | Check Firmware Version | 8  |
| The system will change to DHCP Client type  | #111#                | Set as DHCP client     | 9  |
| DHCP will be disabled and system will change to the Static IP type.<br>Enter IP address using numbers on the telephone key pad. Use the * (star) key when entering a decimal point. | #112xxx*xxx*xxx*xxx# | Set Static IP Address  | 10 |
| Must set Static IP first.<br>Enter value using numbers on the telephone key pad. Use the * (star) key when entering a decimal point.  | #113xxx*xxx*xxx*xxx# | Set Network Mask       | 11 |
| Must set Static IP first.<br>Enter IP address using numbers on the telephone key pad. Use the * (star) key when entering a decimal point.   | #114xxx*xxx*xxx*xxx# | Set Gateway IP Address | 12 |
| Must set Static IP first.<br>Enter IP address using numbers on the telephone key pad. Use the * (star) key when entering a decimal point.   | #115xxx*xxx*xxx*xxx# | Set Primary DNS Server | 13 |

---

## **18.Specification**

### **18.1 Protocols**

SIP (RFC2543,RFC3261)

### **18.2 TCP/IP**

IP/TCP/UDP/RTP/RTCP/

CMP/ARP/RARP/SNTP

DHCP/DNS Client

IEEE802.1P/Q

ToS/DiffServ

NAT Traversal

STUN

uPnP

IP Assignment

Static IP

DHCP

PPPoE

### **18.3 Codec**

G.711 u-Law

G.711 a-Law

G.723.1 (5.3k)

G.723.1 (6.3k)

G.729A

G.729A/B

### **18.4 Voice Quality**

VAD

---

CNG

AEC, LEC

Packet loss

#### 18.5 GSM (GS-495/GS-895)

Dual BAND: 900/1800 MHZ

Tri BAND(BenQ M23): 900/1800/1900 MHZ

Tri BAND(Siemens MC56): 850/1800/1900 MHZ

Quad BAND: 900/1800/1900/850 MHZ

## 19. Appendix: Setup GS-495/GS-895 with Asterisk

### 19.1 Usage

A typical usage of such a gateway is to be able to give a call with your normal mobile to any destination at voip cost :

Your mobile <----*gsm network*----> GS-495/GS-895 <--*lan*--> Asterisk  
<--*internet*--> VOIP provider <--*whatever*--> landline

To do such a call, you just call your GS-495/GS-895 number (it has its own simcard), then you get an invitation tone, then you dial the number which is handled by Asterisk.

If you have some special deals with your mobile operator, like free special number, you can call your GS-495/GS-895 for free.

You can then call all around the world from your mobile at voip cost :-)

### 19.2 GS-495/GS-895 Configuration

Once you've configured everything in the box, one good advice is to unplug the power and to restart it. By this way you should have all the parameters taken into account.

To have the GS-495/GS-895 to work with Asterisk, you need first to



---

configure the box.

Here are some screen shots showing all the important parameters.

You have to note that in all the configuration process, the

GS-495/GS-895 is considered as extension '103' of the IPBX.

In **Bold** are the parameters depending on your installation

LAN Settings

You could configure the LAN settings in this page:

LAN Mode: ☐ Bridge ☒ NAT

**WAN Setting**

IP Type: ☒ Fixed IP ☐ DHCP Client ☐ PPPoE

IP: Gateway **IP**

Mask: 255.255.255.0

Gateway: **Router IP**

DNS Server1: 168.95.192.1

DNS Server2: 168.95.1.1

MAC: 000000000000

---

## LAN To Mobile Table

!@

Page: 1

| Item | URL              | Call Num | Select                   |
|------|------------------|----------|--------------------------|
| 0    | your asterisk IP | #        | <input type="checkbox"/> |
| 1    |                  |          | <input type="checkbox"/> |
| 2    |                  |          | <input type="checkbox"/> |
| 3    |                  |          | <input type="checkbox"/> |
| 4    |                  |          | <input type="checkbox"/> |
| 5    |                  |          | <input type="checkbox"/> |
| 6    |                  |          | <input type="checkbox"/> |
| 7    |                  |          | <input type="checkbox"/> |
| 8    |                  |          | <input type="checkbox"/> |
| 9    |                  |          | <input type="checkbox"/> |

Here the '#' is important to avoid the two stage dialing when you give a call from Asterisk to GSM.

---

## Mobile To LAN Table

!@

Page: 1

| Item | CID                   | URL | Select                   |
|------|-----------------------|-----|--------------------------|
| 0    | authorised mobile n°  | 103 | <input type="checkbox"/> |
| 1    | another authorised n° | 103 | <input type="checkbox"/> |
| 2    |                       |     | <input type="checkbox"/> |
| 3    |                       |     | <input type="checkbox"/> |
| 4    |                       |     | <input type="checkbox"/> |
| 5    |                       |     | <input type="checkbox"/> |
| 6    |                       |     | <input type="checkbox"/> |
| 7    |                       |     | <input type="checkbox"/> |
| 8    |                       |     | <input type="checkbox"/> |
| 9    |                       |     | <input type="checkbox"/> |

The mobile number you give in that page are the authorised mobile which can call GSM to Asterisk.

---

These mobile number must be defined as your GSM provider displays the number.

If you don't know how it is displayed, just give a call to the box and check the number given in the 'Incoming Mob' field of the 'Mobile Status' page. Any number which is not in that list won't have access to the LAN side, so to Asterisk.

If you want to allow any number, just set '\*' in that field ... but beware of the bill ;-)

## Service Domain Settings

You could set information of service domains in this page.

| Realm 1 (Default)  |   |
|--------------------|---|
| Active:            | <input checked="" type="radio"/> On <input type="radio"/> Off |
| Display Name:      | <input type="text" value="103"/>                              |
| User Name:         | <input type="text" value="103"/>                              |
| Register Name:     | <input type="text" value="103"/>                              |
| Register Password: | <input type="text" value="Asterisk extension password"/>      |
| Domain Server:     | <input type="text"/>  |
| Proxy Server:      | <input type="text" value="Asterisk IP"/>                      |
| Outbound Proxy:    | <input type="text"/>  |
| Status:            | Registered  |

Once Asterisk configuration is made, you should get 'Registered' on the Realm1.

---

## Codec Settings

You could set the codec settings in this page.

|                       |             |
|-----------------------|-------------|
| <b>Codec Priority</b> |             |
| Codec Priority 1:     | G.711 u-law |
| Codec Priority 2:     | G.711 a-law |
| Codec Priority 3:     | Not Used    |
| Codec Priority 4:     | Not Used    |
| Codec Priority 5:     | Not Used    |
| Codec Priority 6:     | Not Used    |
| Codec Priority 7:     | Not Used    |
| Codec Priority 8:     | Not Used    |

|                          |       |
|--------------------------|-------|
| <b>RTP Packet Length</b> |       |
| G.711 & G.729:           | 20 ms |
| G.723:                   | 30 ms |

|                   |   |
|-------------------|---|
| <b>G.723 5.3K</b> |   |
| G.723 5.3K:       | <input type="radio"/> On <input checked="" type="radio"/> Off |

|                  |   |
|------------------|---|
| <b>Voice VAD</b> |   |
| Voice VAD:       | <input type="radio"/> On <input checked="" type="radio"/> Off |

It is very important to use only u-law or a-law as all DTMF is inband. So if you want to be able to do some DISA when you call from GSM to Asterisk, it has to be one of these 2 codecs.

## Mobile Setting

You could set the volume of your phone in this page.

|                  |                             |   |            |
|------------------|-----------------------------|---|------------|
| @                |                             |   |            |
| VoIP Volume:     | 10 (0~12)                   | VoIP Gain:                                      | 12 (0~15)  |
| @                |                             |   |            |
| LAN DTMF Gain:   | 10 (0~12)                   | Mobile In Gain:                                 | 3 (0~4)    |
| @                |                             |   |            |
| Caller ID        | <input type="radio"/> Clid  | <input checked="" type="radio"/> Fix (SIP User) |            |
| @                |                             |   |            |
| Mobile PIN Code: | On <input type="checkbox"/> | Code:   | Confirmed: |

These settings seem to be ok, just adjust ...

---

### 19.3 Antenna position

Another important thing is to properly place the provided antenna.

If your gsm reception is good, you should get around 18 or 19 as Signal Quality in the "Mobile Status" page.

With that level of signal quality, your audio quality will be very good.

On the other end, the signal quality down to 11, audio becomes very jerky.

So, maximum signal quality = maximum audio quality.

### 19.4 Asterisk configuration

Once the GS-495/GS-895 is set, you have to configure Asterisk.

On that side, you have to setup files as follow :

#### **19.5 sip.conf**

; GSM VOIP Gateway GS-495/GS-895

[103]

type=friend

username=103

fromuser=103

regexten=103 ; When they register, create extension 401

secret=xxxxxxx ; Asterisk extension password

context=gateway ; Incoming calls context

dtmfmode=inband ; Very important for DISA to work

call-limit=1 ; Limit to 1 call max

callerid=GSM Gateway <103>

host=dynamic

nat=no ; Gateway is not behind a NAT router

canreinvite=no ; Typically set to NO if behind NAT

insecure=very

qualify=yes

disallow=all

allow=ulaw ; preferred codec for DTMF detection

allow=alaw

#### **19.6 extensions.conf**

---

; \*\*\*\*\* GSM Gateway incoming calls \*\*\*\*\*

[gateway]

exten => \_103,1,Answer()

exten => \_103,2,DigitTimeout(3) ; give enough time to do second stage dialing

exten => \_103,3,ResponseTimeout(5)

exten => \_103,4,DISA(no-password|outgoing) ; here 'outgoing' is the normal context to deal with the dial plan

[outgoing]

...

; example of LAN to GSM call

; call the GS-495/GS-895 sim card mail box thru GSM

exten => \_888,1,SetCallerID("xxxxxxxxxx")

exten => \_888,2,Dial(SIP/\${EXTEN}@103,60,r)

exten => \_888,3,Hangup()

---

## 20. How to setup Asterisk to receive Caller ID from

### GS-495/GS-895

#### Test version

trixbox-2.2

#### SIP Softphone

z SJPhone 1.60.289a

z X-Lite 1105x

#### Modify file

z Add the following setting to /etc/asterisk/sip.conf

[1000]

type=friend

secret=1000

qualify=yes

nat=yes

host=dynamic

canreinvite=no

context=internal

[1001]

type=friend

secret=1001

qualify=yes

nat=yes

host=dynamic

canreinvite=no

context=internal

[1002]

type=friend

---

```
secret=1002
qualify=yes
nat=yes
host=dynamic
canreinvite=no
context=internal
```

z Add the following setting to /etc/asterisk/extensions.conf

```
[internal]
exten => 1000,1,Dial(SIP/1000)
exten => 1001,1,Dial(SIP/1001)
exten => 1002,1,Dial(SIP/1002)
```

configure:

```
trixbox-2.2: address=192.168.66.202:5060
SJPhone: address=192.168.66.145:5060; username=1000,
displayname=user_1000
X-Lite: address=192.168.66.145:7331; username=1001, displayname=user_1001
GS-495/GS-895: address=192.168.66.203:5060; username=1002,
displayname=user_1002
```

**test1**

ps tn Æ call 0928492911(mobile number) Æ GS-495/GS-895 Æ hear the second dial tone,call SoftPhone's number Æ SoftPhone Æ show ps tn caller id

This Is X-Lite receiving packet, red word is ps tn number. Test ok.

INVITE sip:1001@192.168.66.145:7331 SIP/2.0

Via: SIP/2.0/UDP 192.168.66.202:5060;branch=z9hG4bK3d0bbaf7;rport



---

From: "035678238" <sip:1002@192.168.66.202>;tag=as580472a7  
To: <sip:1001@192.168.66.145:7331>  
Contact: <sip:1002@192.168.66.202>  
Call-ID: 20fa417265e6a26d0b0aae4f551f06f3@192.168.66.202  
CSeq: 102 INVITE  
User-Agent: Asterisk PBX  
Max-Forwards: 70  
Date: Tue, 22 May 2007 02:50:37 GMT  
Allow: INVITE, ACK, CANCEL, OPTIONS, BYE, REFER, SUBSCRIBE, NOTIFY  
Content-Type: application/sdp  
Content-Length: 242

v=0  
o=root 2737 2737 IN IP4 192.168.66.202  
s=session  
c=IN IP4 192.168.66.202  
t=0 0  
m=audio 15852 RTP/AVP 0 8 101  
a=rtpmap:0 PCMU/8000  
a=rtpmap:8 PCMA/8000  
a=rtpmap:101 telephone-event/8000  
a=fmtp:101 0-16  
a=silenceSupp:off - - -

SIP/2.0 200 Ok  
Via: SIP/2.0/UDP 192.168.66.202:5060;branch=z9hG4bK3d0bbaf7;rport  
From: "035678238" <sip:1002@192.168.66.202>;tag=as580472a7  
To: <sip:1001@192.168.66.145:7331>;tag=677373503  
Contact: <sip:1001@192.168.66.145:7331>  
Call-ID: 20fa417265e6a26d0b0aae4f551f06f3@192.168.66.202  
CSeq: 102 INVITE  
Content-Type: application/sdp  
Server: X-Lite release 1105x

---

---

Content-Length: 254

v=0  
o=1001 4804366 4807851 IN IP4 192.168.66.145  
s=X-Lite  
c=IN IP4 192.168.66.145  
t=0 0  
m=audio 8000 RTP/AVP 0 8 3 101  
a=rtpmap:0 pcmu/8000  
a=rtpmap:8 pcma/8000  
a=rtpmap:3 gsm/8000  
a=rtpmap:101 telephone-event/8000  
a=fmtp:101 0-15  
a=sendrecv

test 2

SoftPhone Æ call 1002 Æ GS-495/GS-895 Æ hear second dial tone and call pstn Æ  
pstn answer Æ show caller id-mobile number 0928492911

This Is X-Lite receiving packet. Test ok.

INVITE sip:1002@192.168.66.202 SIP/2.0  
Via: SIP/2.0/UDP  
192.168.66.145:7331;rport;branch=z9hG4bK4C4315351FC84CA582D14FB8C25F  
C3BF  
From: user\_1001 <sip:1001@192.168.66.202:7331>;tag=1121869743  
To: <sip:1002@192.168.66.202>  
Contact: <sip:1001@192.168.66.145:7331>  
Call-ID: F4B32CA6-1835-4E68-941A-C685B39C43FF@192.168.66.145  
CSeq: 63148 INVITE  
Proxy-Authorization: Digest  
username="1001",realm="asterisk",nonce="0d3b2879",response="8aaaaa5b5ad53

---

654bf0a2ab0fa9bb118",uri="sip:1002@192.168.66.202",algorithm=MD5

Max-Forwards: 70

Content-Type: application/sdp

User-Agent: X-Lite release 1105x

Content-Length: 254

v=0

o=1001 5111461 5111501 IN IP4 192.168.66.145

s=X-Lite

c=IN IP4 192.168.66.145

t=0 0

m=audio 8000 RTP/AVP 0 8 3 101

a=rtpmap:0 pcmu/8000

a=rtpmap:8 pcma/8000

a=rtpmap:3 gsm/8000

a=rtpmap:101 telephone-event/8000

a=fmtp:101 0-15

a=sendrecv

SIP/2.0 200 OK

Via: SIP/2.0/UDP

192.168.66.145:7331;branch=z9hG4bK4C4315351FC84CA582D14FB8C25FC3BF

;received=192.168.66.145;rport=7331

From: user\_1001 <sip:1001@192.168.66.202:7331>;tag=1121869743

To: <sip:1002@192.168.66.202>;tag=as2a2fbf98

Call-ID: F4B32CA6-1835-4E68-941A-C685B39C43FF@192.168.66.145

CSeq: 63148 INVITE

User-Agent: Asterisk PBX

Allow: INVITE, ACK, CANCEL, OPTIONS, BYE, REFER, SUBSCRIBE, NOTIFY

Contact: <sip:1002@192.168.66.202>

Content-Type: application/sdp

Content-Length: 242

---

---

v=0  
o=root 2737 2737 IN IP4 192.168.66.202  
s=session  
c=IN IP4 192.168.66.202  
t=0 0  
m=audio 13798 RTP/AVP 0 8 101  
a=rtpmap:0 PCMU/8000  
a=rtpmap:8 PCMA/8000  
a=rtpmap:101 telephone-event/8000  
a=fmtp:101 0-16  
a=silenceSupp:off - - -

#### register issue

The packet date from Asterisk as follows.

Please note, user\_1002's display name don't appear

So the website's Display Name is not available

<-- SIP read from 192.168.66.203:5060:  
REGISTER sip:192.168.66.202 SIP/2.0  
Via: SIP/2.0/UDP  
192.168.66.203:5060;rport;branch=z9hG4bK590e92b551233a10a0ae71944c19b5  
aa  
From: <sip:1002@192.168.66.202>;tag=4e36d8f1  
To: <sip:1002@192.168.66.202>  
Call-ID: 7e45b773130f1fc945efcee502f84042@192.168.66.203  
Contact: <sip:1002@192.168.66.203:5060>  
CSeq: 10 REGISTER  
Expires: 300  
Authorization: Digest  
username="1002",realm="asterisk",nonce="3ca93a1e",response="4d39ccb0dae64  
bb2f1341e9896ac1ea7",uri="sip:192.168.66.202",algorithm=MD5  
User-Agent: CMI CM5K  
Content-Length: 0

---

---

--- (11 headers 0 lines) ---

Using latest REGISTER request as basis request

Sending to 192.168.66.203 : 5060 (NAT)

Transmitting (NAT) to 192.168.66.203:5060:

SIP/2.0 100 Trying

Via: SIP/2.0/UDP

192.168.66.203:5060;branch=z9hG4bK590e92b551233a10a0ae71944c19b5aa;received=192.168.66.203;rport=5060

From: <sip:1002@192.168.66.202>;tag=4e36d8f1

To: <sip:1002@192.168.66.202>

Call-ID: 7e45b773130f1fc945efcee502f84042@192.168.66.203

CSeq: 10 REGISTER

User-Agent: Asterisk PBX

Allow: INVITE, ACK, CANCEL, OPTIONS, BYE, REFER, SUBSCRIBE, NOTIFY

Contact: <sip:1002@192.168.66.202>

Content-Length: 0

---

Transmitting (NAT) to 192.168.66.203:5060:

SIP/2.0 401 Unauthorized

Via: SIP/2.0/UDP

192.168.66.203:5060;branch=z9hG4bK590e92b551233a10a0ae71944c19b5aa;received=192.168.66.203;rport=5060

From: <sip:1002@192.168.66.202>;tag=4e36d8f1

To: <sip:1002@192.168.66.202>;tag=as13a32ae8

Call-ID: 7e45b773130f1fc945efcee502f84042@192.168.66.203

CSeq: 10 REGISTER

User-Agent: Asterisk PBX

Allow: INVITE, ACK, CANCEL, OPTIONS, BYE, REFER, SUBSCRIBE, NOTIFY

WWW-Authenticate: Digest algorithm=MD5, realm="asterisk", nonce="5def9231"

Content-Length: 0

---

---

---

Scheduling destruction of call

'7e45b773130f1fc945efcee502f84042@192.168.66.203' in 15000 ms

asterisk1\*CLI>

<-- SIP read from 192.168.66.203:5060:

REGISTER sip:192.168.66.202 SIP/2.0

Via: SIP/2.0/UDP

192.168.66.203:5060;rport;branch=z9hG4bK672fa67f59c2223275f5ee286d27597a

From: <sip:1002@192.168.66.202>;tag=4e36d8f1

To: <sip:1002@192.168.66.202>

Call-ID: 7e45b773130f1fc945efcee502f84042@192.168.66.203

Contact: <sip:1002@192.168.66.203:5060>

CSeq: 11 REGISTER

Expires: 300

Authorization: Digest

username="1002",realm="asterisk",nonce="5def9231",response="046a412f4e7ed4e98fd507416994a80a",uri="sip:192.168.66.202",algorithm=MD5

User-Agent: CMI CM5K

Content-Length: 0

--- (11 headers 0 lines) ---

Using latest REGISTER request as basis request

Sending to 192.168.66.203 : 5060 (NAT)

Transmitting (NAT) to 192.168.66.203:5060:

SIP/2.0 100 Trying

Via: SIP/2.0/UDP

192.168.66.203:5060;branch=z9hG4bK672fa67f59c2223275f5ee286d27597a;received=192.168.66.203;rport=5060

From: <sip:1002@192.168.66.202>;tag=4e36d8f1

To: <sip:1002@192.168.66.202>

Call-ID: 7e45b773130f1fc945efcee502f84042@192.168.66.203

CSeq: 11 REGISTER

User-Agent: Asterisk PBX

Allow: INVITE, ACK, CANCEL, OPTIONS, BYE, REFER, SUBSCRIBE, NOTIFY

---

---

Contact: <sip:1002@192.168.66.202>  
Content-Length: 0  
12 headers, 0 lines  
Reliably Transmitting (NAT) to 192.168.66.203:5060:  
OPTIONS sip:1002@192.168.66.203:5060 SIP/2.0  
Via: SIP/2.0/UDP 192.168.66.202:5060;branch=z9hG4bK7b92dd8a;rport  
From: "Unknown" <sip:Unknown@192.168.66.202>;tag=as5dee3942  
To: <sip:1002@192.168.66.203:5060>  
Contact: <sip:Unknown@192.168.66.202>  
Call-ID: 5ebc2211278e2cb7699911ad39454d4e@192.168.66.202  
CSeq: 102 OPTIONS  
User-Agent: Asterisk PBX  
Max-Forwards: 70  
Date: Tue, 22 May 2007 03:11:54 GMT  
Allow: INVITE, ACK, CANCEL, OPTIONS, BYE, REFER, SUBSCRIBE, NOTIFY  
Content-Length: 0  
Transmitting (NAT) to 192.168.66.203:5060:  
SIP/2.0 200 OK  
Via: SIP/2.0/UDP  
192.168.66.203:5060;branch=z9hG4bK672fa67f59c2223275f5ee286d27597a;received=192.168.66.203;rport=5060  
From: <sip:1002@192.168.66.202>;tag=4e36d8f1  
To: <sip:1002@192.168.66.202>;tag=as13a32ae8  
Call-ID: 7e45b773130f1fc945efcee502f84042@192.168.66.203  
CSeq: 11 REGISTER  
User-Agent: Asterisk PBX  
Allow: INVITE, ACK, CANCEL, OPTIONS, BYE, REFER, SUBSCRIBE, NOTIFY  
Expires: 300  
Contact: <sip:1002@192.168.66.203:5060>;expires=300  
Date: Tue, 22 May 2007 03:11:54 GMT  
Content-Length: 0

---

## 21. Simple Steps

Step 1. Change the Network setting if you need (Network/network setting)

Step 2. Register SIP proxy Server or Asterisk or VoipBuster if you need  
(sip setting/service domain)

Step 3. Set Route ( **request** )

|   |     |
|---|-----|
| mobile to lan:  |     |
| *,* --->it is two stage dialing.  | (1) |
| when mobile call in,GS-495/GS-895 will provide dial tone and you can enter ip or asterisk extension or phone number.  |     |
| If you want to enter phone number, please note your asterisk need to have route of destination number.                | *   |
| *, specific extension or IP or phone number   | (2) |
| when mobile call in, GS-495/GS-895 will connect with this specific extension or IP or phone number auto               |     |
| If you want to set specific phone number, please note your asterisk need to have route of destination number.         | *   |
| Lan to Mobile:  |     |
| *,* --->it is two stage dialing.  | (1) |
| when lan phone call in, GS-495/GS-895 will provide dial tone and you can enter mobile number.                         |     |
| *, specific mobile number   | (2) |
| when lan phone call in, GS-495/GS-895 will connect with the specific mobile number auto.                              |     |
| *,#--->It is 1 stage dialing  | (3) |
| When lan phone and GS-495/GS-895 both register Asterisk, you can dial any destination number from lan phone directly. |     |
| Please note: Asterisk need to set route of destination number that dial out from GS-495/GS-895                        | *   |

\* All changes both need to click "save and change"



---

## **SunComm Technology Co., Ltd.**

7F, No. 53, Jian Kang Rd. Chung Ho City, Taipei Hsien, Taiwan 23586

Tel: 886-2-32341496 Fax: 886-2-32341393

E-mail: [sales2@suncomm.com.tw](mailto:sales2@suncomm.com.tw)

Website: [www.suncomm.com.tw](http://www.suncomm.com.tw)

[www.suncomm.info](http://www.suncomm.info)

[www.suncomm.tw](http://www.suncomm.tw)